


RAV 600/900 Wired Controller

CONNECTING THE WIRED CONTROLLER

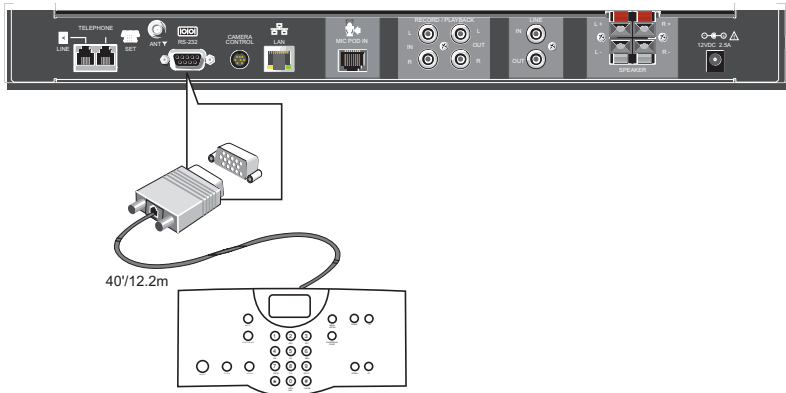

I-153-00001-1.0

1. Connect the wired controller to the mixer's RS-232 serial port using the supplied RJ-11 to DB-9 adapter.

NOTE: Since the wired controller uses the serial port, you must use the mixer's USB port in order to connect your computer to the mixer (see the *RAV 600/900 Quick Start Guide* for connection instructions).

2. Using RAV Ware, configure the serial port to a baud rate of 57600 with flow control OFF (see the *RAV 600/900 User's Manual* for more information).

NOTE: You can also set flow control to OFF via the controller's menu system. To do this, press the MENU button, navigate to the CONFIGURATION screen and press ENTER. Next, navigate to the WIRED CONTROLLER screen and press ENTER. Finally, select ENABLED and press ENTER. This turns flow control OFF.

ClearOne.
You're Virtually There™


TECHNICAL SUPPORT

tel 1-800-283-5936
1-801-974-3760

fax 1-801-974-3669
e-mail tech.support@clearone.com

RAV 600/900 Wired Controller

CONNECTING THE WIRED CONTROLLER

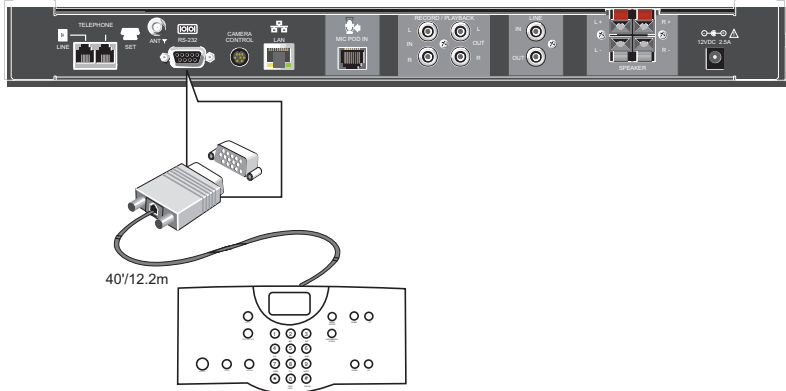

I-153-00001-1.0

1. Connect the wired controller to the mixer's RS-232 serial port using the supplied RJ-11 to DB-9 adapter.

NOTE: Since the wired controller uses the serial port, you must use the mixer's USB port in order to connect your computer to the mixer (see the *RAV 600/900 Quick Start Guide* for connection instructions).

2. Using RAV Ware, configure the serial port to a baud rate of 57600 with flow control OFF (see the *RAV 600/900 User's Manual* for more information).

NOTE: You can also set flow control to OFF via the controller's menu system. To do this, press the MENU button, navigate to the CONFIGURATION screen and press ENTER. Next, navigate to the WIRED CONTROLLER screen and press ENTER. Finally, select ENABLED and press ENTER. This turns flow control OFF.

ClearOne.
You're Virtually There™

TECHNICAL SUPPORT

tel 1-800-283-5936
1-801-974-3760

fax 1-801-977-0087
e-mail tech.support@clearone.com