ClearOne.

Tour Mode

WS800 Wireless Microphone Systems

CLEARONE DOCUMENT DOC-0251-001 (REVISION 1.0) Oct., 2015 WS800 Wireless Microphone Systems: How to use the Tour Mode

Using the Tour Mode on the ClearOne WS800 Wireless Microphone System:

The ClearOne WS800 wireless microphone systems have many great features. One of these features is TOUR MODE. This feature can be used when a speaker (presenter) wants to travel between spaces/buildings but does not have time to re-sync the transmitter (microphone) to the receiver in that space or building. Typically this is required because an AES encryption key is assigned to a particular transmitter that is paired with a particular receiver. Tour Mode makes it possible to use the same KEY for one transmitter to be paired with multiple receivers at the same time. This is a very useful tool for teachers, tour guides, presenters or performers who are walking back and forth between spaces.

Note:

On initial set-up you will need to be able to connect to all of the receivers, one at a time, using the ClearOne WS800 GUI to complete this process. Both the transmitter and the receivers being used for this must be in the same frequency band.

1. Connect the first receiver to the WS800 GUI. When connected, left click on the "settings" tab. Then, left click on "Tour Mode". The following screen will pop-up.

2. Type a ke 3. Click the 4. Sync the 5. To allow		can be from 1-32 alp send the key to the r on the receiver. The k nect to the transmitter	hanumeric characters receiver. tey will then be stored r, repeat steps 1-3 abo	i. I in the transmitter and ove, and then use the		receiver to set the key	in the selected slot.	
Slot Tour Mode Key	1 Oisabled Enabled	2 Disabled Enabled 	3 ● Disabled ○ Enabled	4 Oisabled Enabled	5 © Disabled © Enabled	6 i Disabled Enabled	7 Disabled Enabled 	8 Disabled Enabled
Rey	Update Key			Update Key				

- 2. Left click on the "enabled" and fill in the dot.
- 3. Type in your KEY (this can be anything letters or numbers up to 32 characters. Click the "Update Key" box. This screen should then pop up. (Below)


All receive	ers must use the s	ame AE	is to receive audio from a single transmitter. S key as the transmitter to receive audid. The Tour mode function allows you to ceivers and a transmitter.	manually assig	n a key so that it
2. Type a ke 3. Click the ' 4. Sync the t 5. To allow o	ry in the box. The key Update Key' button tr rransmitter to the slot ther receivers to con a the slot is on the sain 1 O Disabled	o send the on the rep nect to t	eiver. The key will then he stored in the transmitter and the receiver card	7 Disabled	8
Key	Enabled		OK	Enabled	Enabled

4. You are now ready to sync your transmitter with the first receiver. Click OK and the screen below will appear.

. Click the	Enabled' radio button	on the selected slot to	o enable tour mode.					
. Click the	Update Key' button to	can be from 1-32 alph send the key to the r	receiver.					
. To allow (other receivers to con		repeat steps 1-3 abo	in the transmitter and ove, and then use the		receiver to set the key	r in the selected slot.	
Make sur	e the slot is on the sar	ne channel as the trar	nsmitter.					
Slot	1	2	3	4	5	6	7	8
Tour	Disabled	Oisabled	Oisabled	O Disabled	Oisabled	Oisabled	Oisabled	Oisabled
Mode	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled	Enabled
Key								
	Update Key Waiting for			Update Key				

Tip: (hold the transmitter about 6 inches away from the front of the receiver slot with the TX (IR) sensor facing it then press the 2 sync buttons as described in the previous pop-up prompt.

5. After the transmitter is synced successfully you will see this:

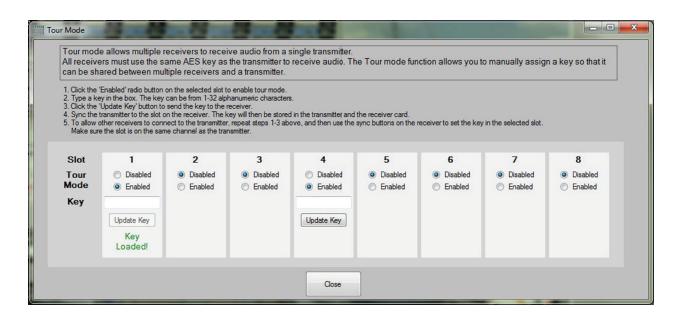

6. To complete the Tour Mode process repeats the above steps with the other receiver(s) using the same (1) transmitter. Make sure you enter the exact same KEY for the next receiver(s).

End.

HEADQUARTERS:

Salt Lake City, UT USA 5225 Wiley Post Way Suite 500 Salt Lake City, UT 84116

Tel: 801.975.7200 Toll Free: 800.945.7730 Fax: 801.977.0087 E-mail: sales@clearone.com EMEA Tel: +44.1454.616.977 E-mail: global@clearone.com APAC Tel: +011.852.3590.4526 E-mail: global@clearone.com LATAM Tel: 801.974.3621 E-mail: global@clearone.com Tech Sales Tel: 800.705.2103 E-mail: techsales@clearone.com

Technical Support Tel: 800.283.5936 E-mail: tech.support@clearone.com

© 2015 ClearOne Inc. All rights reserved. Information in this document is subject to change without notice. DOC-0251-001 Rev. 1.0 - October 2015