

# **COLLABORATE® Pro 900** Quick-Start Guide




# COLLABORATE PRO 900 COMPONENTS INCLUDED

COLLABORATE Pro 900			
	COLLABORATE Pro codec with power supply, COLLABORATE Remote control with dongle, and HDMI cable.		
	910-2100-001		
	UNITE 100 PTZ camera, power supply, DVI-I to HDMI cable and RS232 Serial Control cable.		
	CONVERGE Pro 840T Mixer, Beamforming Microphone Array, CONVERGE USB, cables and power supplies.		
	Note: The Beamforming Microphone Array mounting kit must be ordered separately.		

## MAKING THE CONNECTIONS

Connect the Beamforming Microphone Array to the CONVERGE Pro 840T, then connect the CONVERGE Pro 840T to the CONVERGE USB. Connect the CONVERGE USB, UNITE 100 camera, Ethernet, and monitor(s) to the COLLABORATE Pro codec as shown.

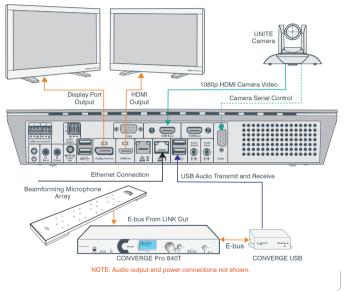


# COLLABORATE PRO 900 CONNECTING THE REMOTE CONTROL DONGLE

The Remote Control includes a dongle that plugs into the FRONT USB port on the codec.



## **CONFIGURING AUDIO INPUT AND OUTPUT**

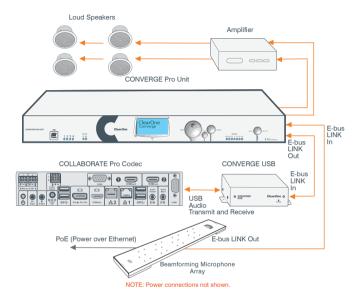

# COLLABORATE PRO 900 CONFIGURING DISPLAY SETTINGS

After all peripherals are connected to the unit, turn the unit on.

Once COLLABORATE Pro is loaded – you will see your local camera video on your screen.

Using the remote control, navigate to the display settings:

### Settings > System > Display

isplay Mode	Single Mode	
isplay	Single/Main	
evice	(HDMI ·	
esolution	(1280x720 ·	
Display Remote On Main Keep Aspect Ratio		
		<ul> <li></li> </ul>
Secondary Display Used For Data Only		
	splay avice esolution splay Remote On Main eep Aspect Ratio	splay Single/Main avice HDMI assolution 1280x720 splay Remote On Main arep Aspect Ratio

According to your monitor capabilities, set to the maximum supported resolution. If 2 monitors are connected to the unit, the display mode is automatically changed to dual mode and you can set both monitors' resolutions.

## **CONFIGURING AUDIO SETTINGS**

The COLLABORATE Pro audio input and output is Converge Pro.

Verify this in COLLABORATE Settings > System > Audio

System			
Audio	Audio Input	Converge Pro	•
Camera	Audio Output	Converge Pro	- Play
Display	Microphone Level	<b>9</b> – <b>—</b>	+
<b>〈</b> Back	🗸 ОК	L Apply	

# COLLABORATE PRO 900 CONFIGURING NETWORK SETTINGS

Using your remote control, navigate into the network settings:

### Settings > Advanced > IP

Advanced							
Admin	Obtain address from DHCP	~	Ethernet Speed	1000.0			
IP	IP Address	172.20.1.10					
Directory	Subnet Mask	255.255.0.0					
H.323	Default Gateway	172.20.0.253					
SIP	Obtain DNS automatically						
Multicast	DNS Server	172.20.0.100					
Firewall	Additional DNS Server	172.20.0.105					
Spontania	DNS Suffix	Clearone.com					

The COLLABORATE Pro obtains its IP automatically by default from the DHCP server.

Uncheck the DHCP checkbox in order to manually configure network settings.

## **CLEARONE CONTACTS**

#### **HEADQUARTERS:**

### Salt Lake City, UT USA

5225 Wiley Post Way Suite 500 Salt Lake City, UT 84116

Sales: 800-707-6694 Toll Free: 800.945.7730 Fax: 801.303.5711 e-mail: sales@clearone.com

### Europe & Oceana

Tel: +44.1454.616.977 e-mail: global@clearone.com

#### Latin America

Tel: +801.974.3621 e-mail: global@clearone.com

#### TechSales

Tel: 800.707.6694 e-mail: techsales@clearone.com

Technical Support Tel: +800.283.5936 e-mail: collaborate.support@clearone.com

Asia Pacific Tel: +852.3590.4526 e-mail: global@clearone.com

#### Middle East Tel: +852.3590.4526 e-mail: global@clearone.com

© 2015 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice. QSG-0025-001 Revision 1.1, September, 2015