

ClearOne®

Versa® 120D



ClearOne® Contacts

Headquarters

5225 Wiley Post Way Suite 600
Salt Lake City, UT 84116

Sales

Tel: +1.801.975.7200
sales@clearone.com

Headquarters

Tel: +1.801.975-7200

Technical Support

Tel: +1.801.974.3760
audiotechsupport@clearone.com

Notices

© 2025 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice.

Document: QSG-0175-001v1.0 February 2025

Important Safety Information

1. Before you set up the versa 120D, read this manual carefully. Follow the setup instructions indicated in this manual.
2. Keep this manual for future use.
3. To prevent electric shock, do not remove screws or the versa collaboration switcher kit, housing. No self-serviceable parts are inside the housing

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE



THE LIGHTING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF DANGEROUS VOLTAGE INSIDE THE PRODUCT.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN
AVIS RISQUE DU CHOC ELECTRIQUE
- NE PAS OUVRIR

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.



Use only in non-tropical locations.



Use only at altitudes of 2000 meters or less.

SEE MARKING ON BOTTOM/BACK OF PRODUCT

Packing List

Verify that you have received all parts associated with each of the components.

Inspect your shipment carefully. If the shipment shows obvious signs of damage, retain original boxes and packing material for inspection by the carrier, and contact them immediately. ClearOne is not responsible for product damage incurred during shipment.

No	Description	Quantity
1	Versa 120D	1
2	Mounting kit(2x ears + 2x screws)	1
3	Rubber feet	4
4	DC24 V6.5A power adapter with power cables (US/EU/UK/AU)	1
5	2 meters USB-C cable USB4/Thunderbolt 3/4, support DP 1.4 Alt Mode, PD 100W	1
6	User Manual	1

 **Note:** Please contact your distributor immediately if any damage or defect to the components is found.


User Manual

The user manual can be downloaded from the ClearOne.com website.

www.clearone.com/

Setup

The following is an example setup. Your system may differ based on your chosen cameras, displays, audio devices, and computers.

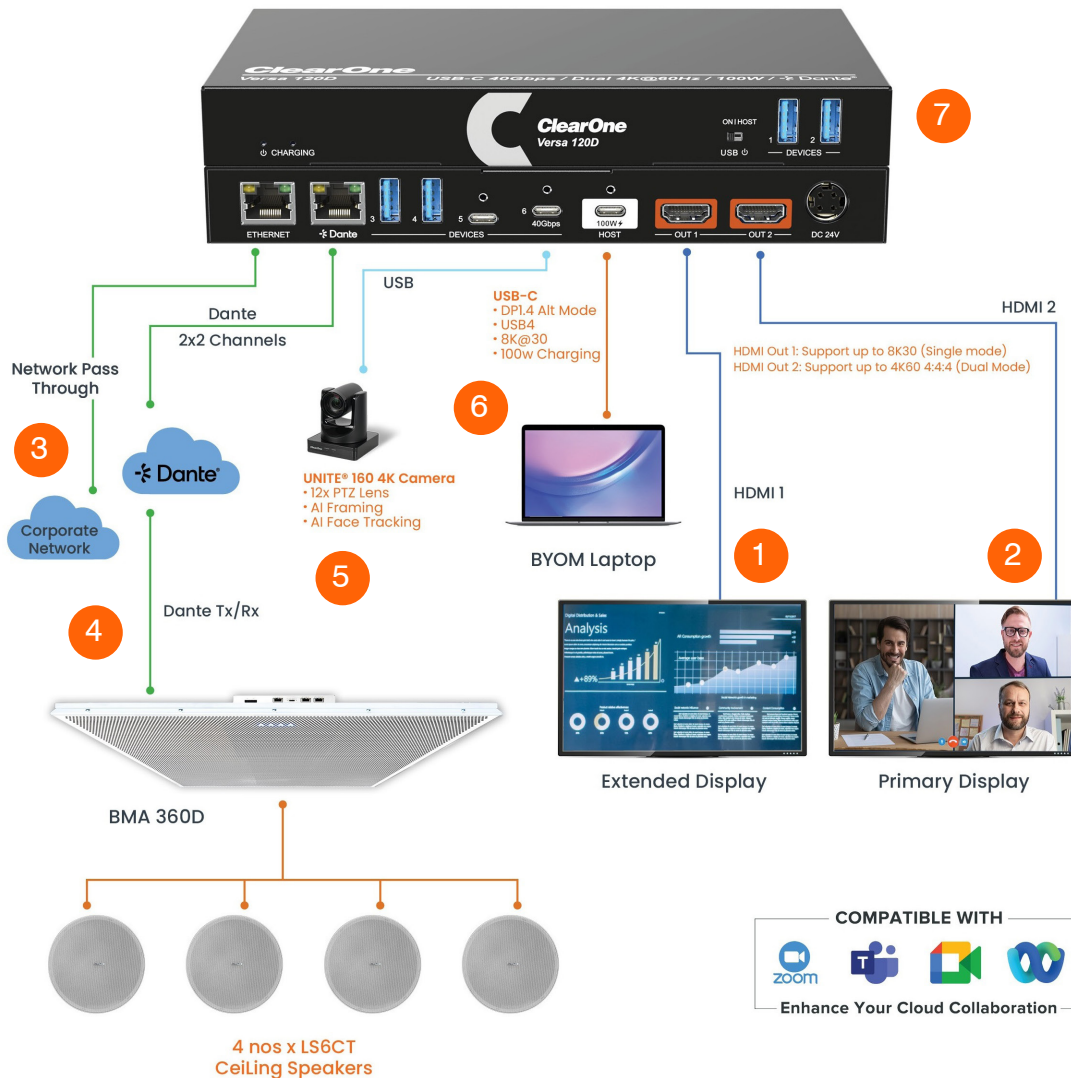

- 1 Connect a room display to the HDMI connector for 8K30 quality.
- 2 Another display can be simultaneously connected to the HDMI number 2. Dual display will show 4K60 resolution.
- 3 Connect Versa 120D to the network switch.
- 4 Connect Versa 120D to the Dante network. Clearone devices such as BMA360D and speakers would be connected to the same Dante Network.
- 5 Connect a USB Camera (not provided) to the USB Type A port on any USB Type A port.

- 6 Connect a computer with a USB C port.
- 7 Connect your keyboard and mouse to the front USB Type A ports.

Safety Precautions

Installation

This product should be placed on a smooth flat surface, or bracket-mounted, if desired. Avoid contact with any liquid, gas or solid material that may cause corrosion.

Do Not Disassemble

This product has no user-repairable parts. Damage caused by unauthorized disassembly is not covered by warranty.

Notice

Electromagnetic fields at specific frequencies may affect audio quality.