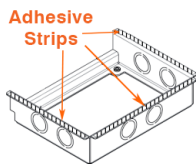# ClearOne®

Conduit Boxes for BMA CT, CTH, and BMA 360

The method of attachment of the conduit box differs between a BMA CT or CTH, and a BMA 360. For the BMA CT or CTH, adhesive strips are used; for the BMA 360, screws are used.

Important: ClearOne recommends that you attach the conduit box before you install the full unit in the ceiling grid.

For BMA CT or CTH

Step 1

Remove adhesive tape liner from bottom three surfaces of conduit box to expose adhesive strips. This adhesive is rated for high temperatures.

Adhesive Strips

Conduit Box Part Number:

910-3200-205-CB

Included Parts:

- Conduit box with 6 concentric 1/2" and 3/4" knockouts, with adhesive strips on edges (1)
- Conduit box lid (1)
- M4x8mm screws (4)

Step 2

To avoid prematurely engaging the adhesive while you align the open end of the box to the BMA CT/CTH connectors, tilt the conduit box and slide it into position against the self-clinching nuts.
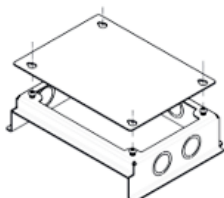
Press the box into place.

Step 3

Remove the conduit box lid.

Attach conduit.

Route cables through desired knockouts.

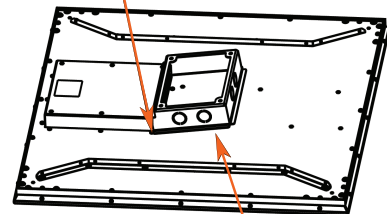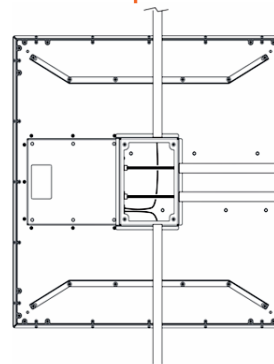Use the four M4x8mm screws to re-attach the conduit box lid.

To position the conduit box, use the self-clinching nuts.

To avoid tape engaging prematurely, keep conduit box tilted until properly positioned.
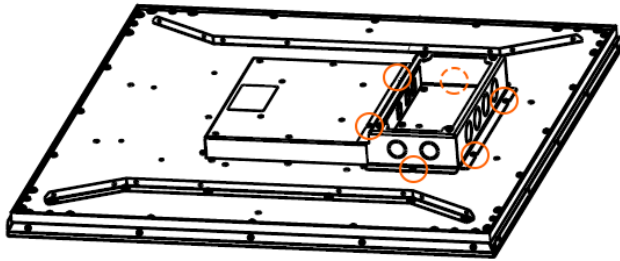

To speaker 1

To CP2 or P-Link device
To PoE injector

To speaker 2

For BMA 360

Step 1

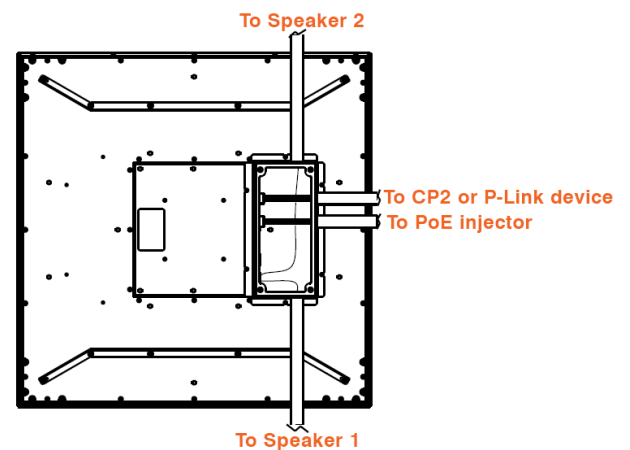Use the six M3x8mm screws to attach the conduit box to the back of the BMA 360.
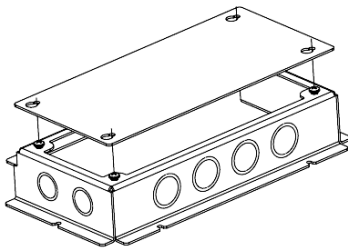
Step 2

Remove the conduit box lid.

Attach conduit.

Route cables through desired knockouts.

Use the four M4x8mm screws to re-attach the conduit box lid.

To Speaker 2

To CP2 or P-Link device
To PoE injector

To Speaker 1