


Surface Mount Kit for BMA CT, BMA CTH and BMA 360

To install the surface mount kit, first assemble the frame, and then attach the frame to the ceiling.


Step 1

On each end of one frame piece, insert a spring clip into the inside channel.

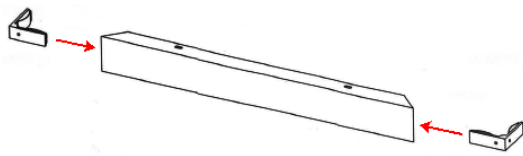

Step 2

At each end of the frame piece from step 1, slide the inside channel of another frame piece onto the clip to form a u-shape.

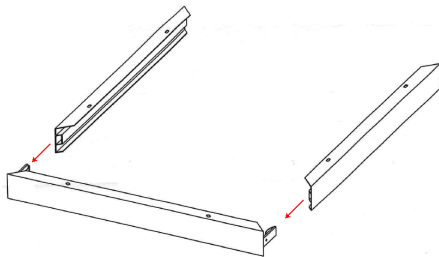


Step 3

Lift the u-shaped frame into place against the ceiling. Attach the frame to the ceiling.



Warning! Surface mount kit must be independently supported by building structure according to all applicable national and local codes.

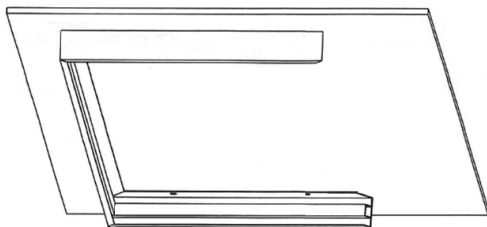

Important!

- Examine shipment and report damage to your transportation carrier.
- Install in accordance with all applicable local codes.
- Ensure that power is off before you start installation.

Part Number:


- 910-3200-210
- 910-3200-210-I (International)

Included Components:

- Frame piece (4)
- L-shaped spring clip (4)

Step 4


Attach cables to ports on the back of the BMA. Then slide the BMA onto the recessed edges of the frame.

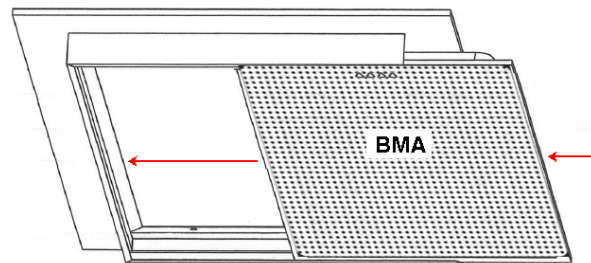

Step 5:

On each end of the remaining frame piece, insert a spring clip into the inside channel.

Push the spring clips into the channels of the mounted u-shaped frame.

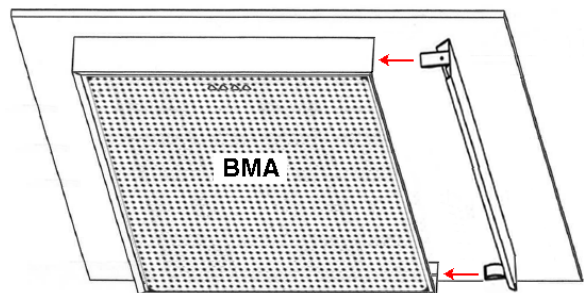

ClearOne Contacts

Headquarters

5225 Wiley Post Way
Suite 500
Salt Lake City, UT 84116

Sales

Tel: 801.975.7200
e-mail: sales@clearone.com

US & Canada

Tel: 801.975.7200
Fax: 801.303.5711

Technical Support

Tel: 801.974.3760
e-mail: tech.support@clearone.com

International

Tel: +801.974.3621
e-mail: global@clearone.com