

# CONVERGE® Huddle and BMA CT/CTH Firmware Release that Enables Units to be Used Interchangeably.

New firmware updates are now available for the Huddle, Huddle CTH, BMA CT, and BMA CTH that enables any BMA CT and BMA CTH to work interchangeably with a CP2, Huddle, and Versa USB and enables any Huddle to work with a BMA CT/CTH. Simply use CONSOLE AI to upgrade any Huddle, Huddle CTH, BMA CT, and BMA CTH. The firmware can be downloaded using “Check for Updates...” in CONSOLE AI or by downloading the files from the Resource Library at [clearone.com](http://clearone.com).


## Related ClearOne Products

- CONVERGE Huddle (910-3200-701)
- CONVERGE Huddle CTH (910-3200-706)
- BMA CT (910-3200-205/205-I)
- BMA CTH (910-3200-206/206-I)
- COLLABORATE Versa USB (910-3200-305)

## Firmware Versions

- CONVERGE Huddle v8.6.3.3
- BMA CT v2.0.0.0
- BMA CTH v.2.0.0.0

## Interchangeable

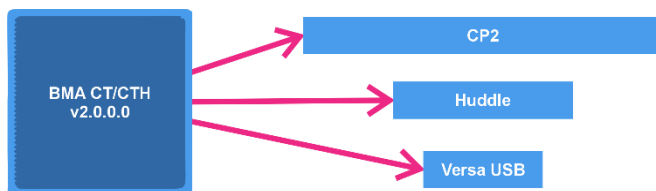

*Once upgraded to v2.0.0.0, a BMA CT and BMA CTH will work interchangeably with a CP2, Huddle, and Versa USB.*

# Simplification by Reducing the Models

## Huddle and Huddle CTH

This firmware update enables any Huddle type to work with the BMA CTH. This will make the Huddle (910-3200-701) work with a BMA CTH in the same way a Huddle CTH (910-3200-706) does. The Huddle CTH will no longer be manufactured—only the Huddle will be manufactured. Bundles that previously included the Huddle CTH will be changed to include the Huddle.


## BMA CT and BMA CTH

Firmware v2.0.0.0 enables the BMA CT (910-3200-205/205-I) and the BMA CTH (910-3200-206/206-I) to work with a CP2, Huddle, and Versa USB. The BMA CTH will no longer be manufactured—Only the BMA CT will be manufactured. Bundles that previously included the BMA CTH will be changed to include the BMA CT.

## COLLABORATE Versa USB

A COLLABORATE Versa USB will function with a BMA CT or BMA CTH at v2.0.0.0. Connect to the system using CONSOLE AI Lite and you can control and configure the system. However, firmware upgrades for the BMA CT and BMA CTH at v2.0.0.0 are not yet supported. For now, a CP2 or Huddle must be used to update a BMA CT or BMA CTH to v2.0.0.0, respectively. A future release to CONSOLE AI Lite software and Versa USB firmware will add the ability to perform these firmware upgrades.

# Upgrade Firmware using CONSOLE AI

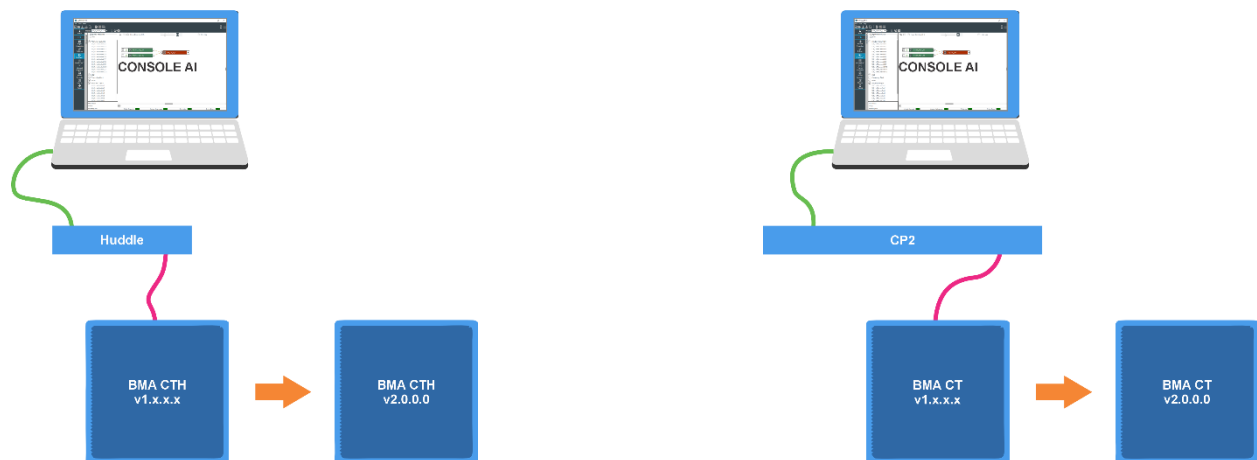

# Questions and Answers

## Can I use a BMA CT with a Huddle?

Yes.

1. Upgrade the BMA CT to v2.0.0.0 using CONSOLE AI and a CP2 unit.
2. Using CONSOLE AI, upgrade the Huddle to v8.6.3.3.

## Can I use a BMA CTH with a CP2?

Yes.

1. Upgrade the BMA CTH to v2.0.0.0 using CONSOLE AI and a Huddle unit.
2. Using CONSOLE AI, upgrade the Huddle to v8.6.3.3.

## Can I use a BMA CT with a Versa USB?

*Yes, but not for firmware upgrades.*

1. Upgrade the BMA CT to v2.0.0.0 using CONSOLE AI and a CP2 unit.
2. Firmware upgrades on the BMA CT are not yet supported in CONSOLE AI Lite. This support will be added in an upcoming update.

## Can I use a BMA CTH at firmware v2.0.0.0 with a Versa USB?

*Yes, but not for firmware upgrades.*

1. Upgrade the BMA CTH to v2.0.0.0 using CONSOLE AI and a Huddle unit.
2. Firmware upgrades on the BMA CTH to v2.0.0.0 are not yet supported in CONSOLE AI Lite. This support will be added in an upcoming update.

## Can I use a BMA CT with a COLLABORATE Versa Lite CT?

*Yes, but not for firmware upgrades.*

1. Upgrade the BMA CT to v2.0.0.0 using CONSOLE AI and a CP2 unit.
2. Firmware upgrades on the BMA CT are not yet supported in CONSOLE AI Lite. This support will be added in an upcoming update.

## Can I use a BMA CT with a COLLABORATE Versa Pro CT?

Yes.

1. Upgrade the BMA CT to v2.0.0.0 using CONSOLE AI and a CP2 unit.
2. Using CONSOLE AI, upgrade the Huddle to v8.6.3.3.