

# ClearOne®

COLLABORATE® Pro 300

Quick-Start Guide




## COLLABORATE PRO 300

### COMPONENTS INCLUDED

COLLABORATE Pro 300	
	COLLABORATE Pro 300 codec with power supply, VESA Mounting Plate, and COLLABORATE Remote Control with USB dongle
	910-2100-004 UNITE 150 PTZ camera, power supply, USB cable  <i>Note: The remote control inside the camera box is only for any advanced configuration in the camera, if required.</i>  <i>For the camera's control, use the COLLABORATE Codec Appliance's remote control.</i>
	910-3001-200 CHAT 150C with USB cable

## CONNECTING PERIPHERALS

Connect the CHAT 150C, UNITE Camera, monitor(s), and network to the COLLABORATE Pro 300 codec as shown.

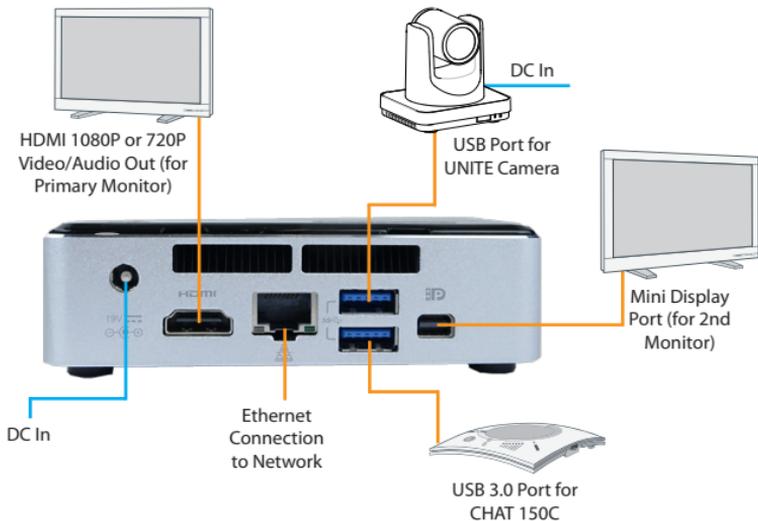

## CONNECTING REMOTE CONTROL DONGLE

Install batteries in the remote control and plug in the USB dongle into the codec.


**Note:** To maximize range of the remote, verify that the dongle and the UNITE camera USB are plugged into opposite sides of the codec.

## COLLABORATE PRO 300



## SECURITY

A lock support feature allows you to secure your codec.

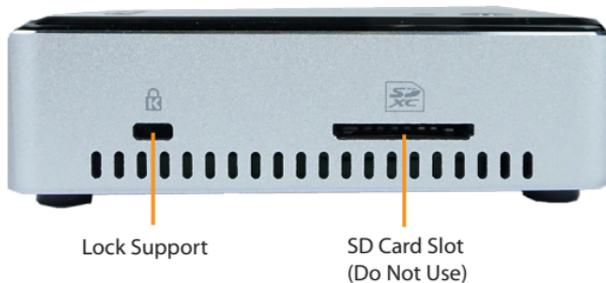

## CONFIGURING DISPLAY SETTINGS

After all peripherals are connected to the unit, turn the unit on.

Once COLLABORATE Pro is loaded, the Setup Wizard appears. The Setup Wizard lets you configure the system name, time, and network, proxy, and Spontania settings. After the Setup Wizard is complete, using the remote control, navigate to the display settings:

### Settings > System > Display



System	
Audio	Display Mode: Single Mode
Camera	Display: Single/Main
Display	Device: HDMI
LAN	Resolution: 1920x1080
Wi-Fi	Display Remote On Main: <input checked="" type="checkbox"/>
Update	Keep Aspect Ratio: <input checked="" type="checkbox"/>
	Secondary Display Used For Data Only: <input type="checkbox"/>

According to your monitor capabilities, set to the maximum supported resolution. If 2 monitors are connected to the unit, the display mode is automatically changed to dual mode and you can set both monitors' resolutions.

## COLLABORATE PRO 300

### CONFIGURING AUDIO SETTINGS

The COLLABORATE Pro 300 audio input and output are set to the CHAT 150C.

Verify this in COLLABORATE **Settings > System > Audio**



The screenshot shows the 'System' settings page with the 'Audio' tab selected. The settings are as follows:

Setting	Value
Audio Input	CHAT 150C
Audio Output	CHAT 150C
Microphone Level	Volume slider (partially filled)

Additional details: A 'Play' button is located to the right of the Audio Output dropdown. The left sidebar contains navigation options: Audio (selected), Camera, Display, LAN, Wi-Fi, and Update.

## CONFIGURING NETWORK SETTINGS

Using your remote control, navigate into the network settings:

**Settings > System > LAN**

System	
Audio	Obtain Address From DHCP <input checked="" type="checkbox"/> Ethernet Speed 1000.0 Mbps
Camera	IP Address <input type="text" value="172.20.1.57"/>
Display	Subnet Mask <input type="text" value="255.255.0.0"/>
<b>LAN</b>	Default Gateway <input type="text" value="172.20.0.253"/>
Wi-Fi	Obtain DNS automatically <input checked="" type="checkbox"/>
Update	DNS Server <input type="text" value="172.20.0.100"/>
	Additional DNS Server <input type="text" value="172.20.0.105"/>
	DNS Suffix <input type="text" value="vconltd.co.il"/>

The COLLABORATE Pro 300 obtains its IP automatically by default from a DHCP server.

Uncheck the Obtain Address from DHCP checkbox to manually configure network settings.

# COLLABORATE PRO 300

## CLEARONE CONTACTS

### Headquarters

5225 Wiley Post Way  
Suite 500  
Salt Lake City, UT 84116

### US & Canada

**Tel:** 801.975.7200  
**TollFree:** 800.945.7730  
**Fax:** 801.303.5711

### International

**Tel:** + 1.801.975.7200  
**e-mail:** [global@clearone.com](mailto:global@clearone.com)

### Sales

**Tel:** 801.975.7200  
**e-mail:** [sales@clearone.com](mailto:sales@clearone.com)

### TechSupport

**Tel:** 801.974.3760  
**e-mail:** [collaborate.support@clearone.com](mailto:collaborate.support@clearone.com)